


MATLAB Input/Output to Peripherals

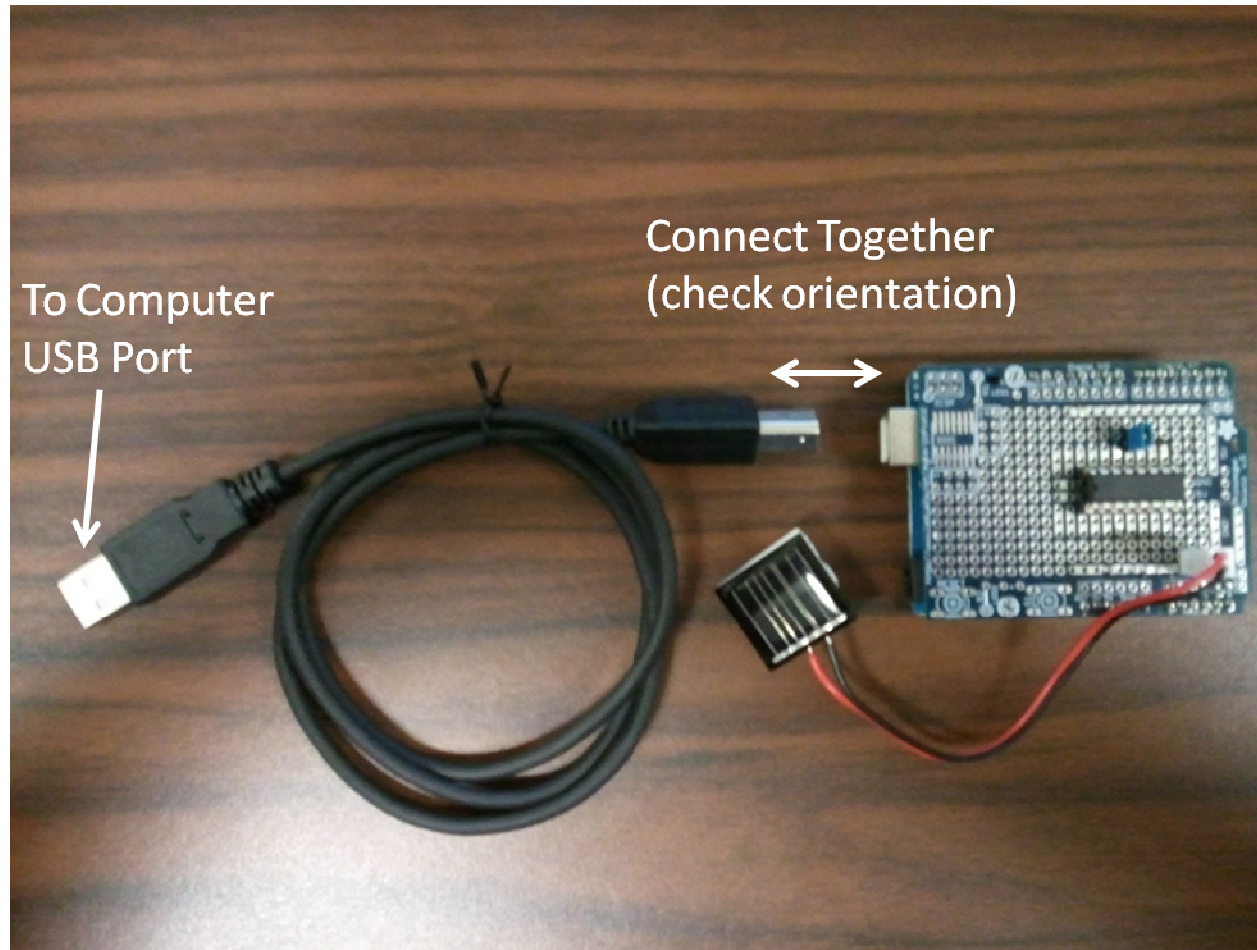

Input From Peripherals


- Getting data from hardware

MATLAB Script

```
...  
% make connection  
connect('COM3');  
...  
...  
power = get_solar_panel_power()  
...  
tilt = get_solar_panel_tilt()  
...  
load = get_solar_panel_load()  
...
```



Serial
Communication

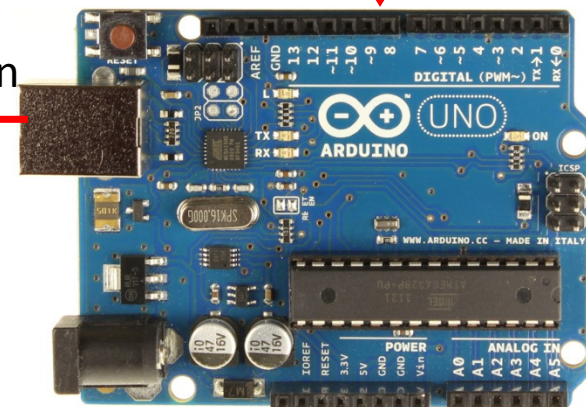

Output to Peripherals

- Controlling the hardware

MATLAB Script

```
...  
...  
...  
current_power = get_solar_panel_power();  
if current_power < acceptable_power  
    ...  
    new_tilt = 47;  
    set_solar_panel_tilt(new_tilt);  
    ...  
    new_orientation = 23;  
    rotate_panel(new_orientation);  
end  
...
```



Serial
Comm.

